



**Supplementary
instructions for 3D
reproduction with
TechniPlus ISIO**



Dear customer,

Your TechniSat TechniPlus ISIO device has the option to reproduce 3D. The functioning and the related adjustment steps are not included in this manual. For this reason, please note the following tips and adjustment steps.

Health and Safety Warnings



While viewing moving images some people can get such symptoms as over exercising, cramps, nausea, eye fatigue, dizziness or unconsciousness. In this case you should promptly take a break and interrupt viewing the 3D until the symptoms have disappeared. Avoid watching television too long and take regular breaks.



Persons in poor physical condition should avoid watching the 3D.



The eyes of young children (especially under the age of six years) are in the development phase. Please consult your ophthalmologist or the paediatrician before you allow children to watch 3D television. The elders shall supervise young children and ensure, that the aforementioned recommendations are maintained.



The 3 D glasses (polarized glasses) are not appropriate as sunglasses and for children under 3 years. These glasses do not protect your eyes from ultraviolet light. Only suitable for watching 3D television.



For the best 3D experience you should watch, if possible at the right angle of the panel. Double edged contours appears instead of the 3D effect, if you look from too far down or from above.

3D-/2D- Playback mode


- > Select the desired display mode, under the option 3D using Option (see point 5.5) in the instruction manual.



-  When using the setting off, the image on the screen will be displayed in the way it is transferred from the respective sender.
-  Select the point 3D mode and continue with the step 3D mode for displaying 3D.
-  Select the point 2D mode and continue with the step 2D mode for displaying 2D.

3D-Mode

When selecting the point 3D Mode in the option, another message to the current transmission of the TV image appears.

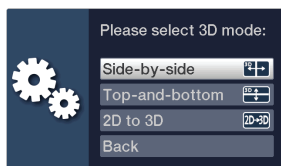


- > Select Side-by-side, when the images shall be transmitted side by side.
 - > Select Top-and-bottom, when the images shall be transmitted on top of each other.
 - > Select 2D to 3D, when the „normal TV image shall be transmitted in 3D, an artificially 3D effect will be generated in this way.
-  Please note, for watching 3D you need 3D glasses. These are available in the specialized trade, under 3D – glasses set (2 pieces). Art. Nr. 0002/9211

2D-Mode

The images transmitted in 3D can be displayed as “normal” pictures with the 2D-mode.

- > Select the point 2D-Mode in the options for displaying 3D contents in 2D. A new request appears.

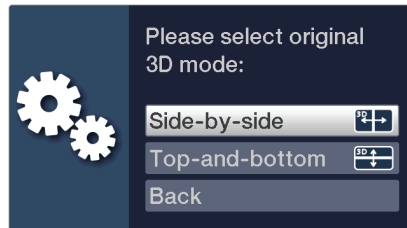

- > Select Side-by-side when the images shall be displayed side by side.
- > Select Top-and-bottom when the images shall be transmitted on top of each other.